

Enforcer / PCX - Engineer Menu: Options UP/ Downloading

In the Engineering menu navigate to: -

OPTIONS UP/ DOWNLOADING




Press  and change the “Download by” connection path from RS232 to Cloud.

Press  and then scroll through the submenu and check or change the following parameters:-

- **“System ID”** – Take a note of the system ID. AAAAAAA (Remember we do not use 1 or 0)
- **“Security”** set to “Standard”.
- **“System Password”** – **Must be Set** to allow Cloud UDL connection via the Insite UDL software. Whatever you input here must be set in the panel account details within Insite UDL software.
- **“Poll server?”** should be set to “yes”.
- **“UDL password”**... We recommend that this is not set for initial connections.
- **“Site Name”** ... We recommend that this is not set for initial connections. As with UDL password if you do add it then it **must** set up in the panel account within Insite UDL software.
- **“UDL Priority”** – Set to low.
- Select  To Exit Engineer to **save the changes**


Insite UDL software.

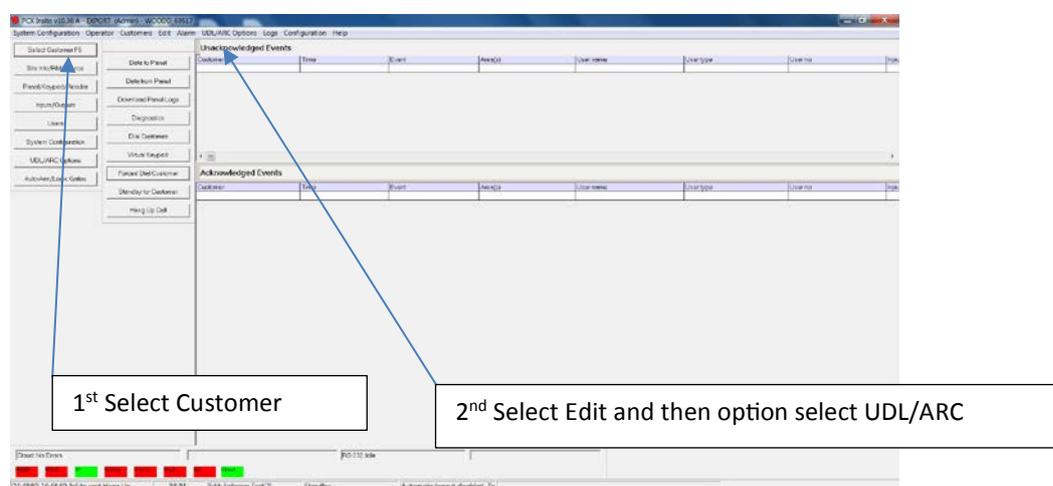


1st Select Customer

2nd Select Edit and then option select UDL/ARC

Change "RS232" Option to "Cloud" On Insite

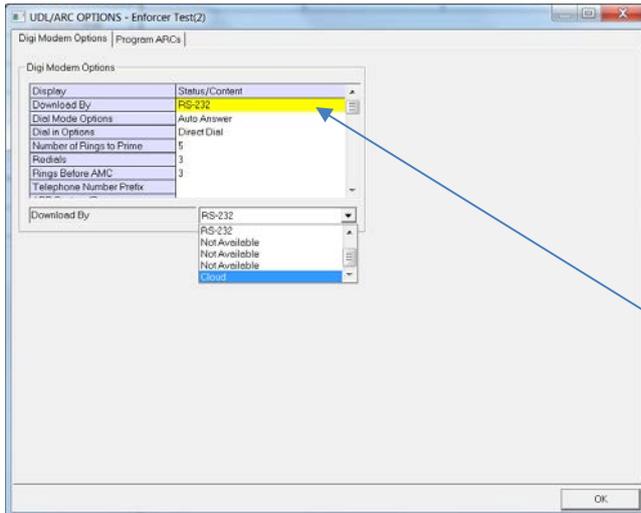

Change RS-232 to Cloud

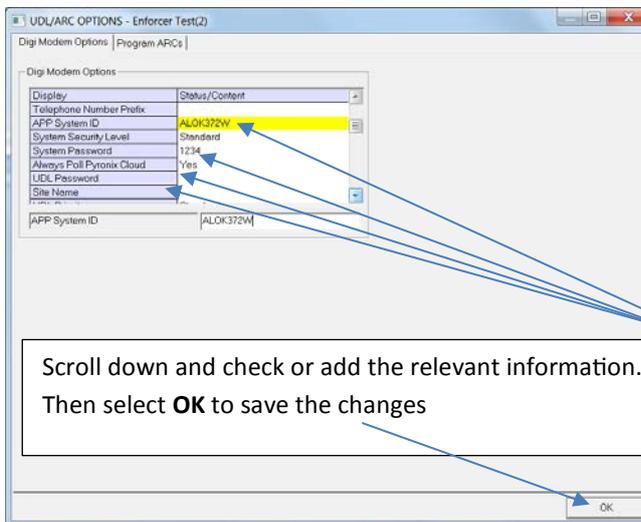

Scroll down and check or add the relevant information.
Then select **OK** to save the changes

Select and dial customer

