



## Quick Guide- On How To Program Activate the User Automation PGM Output.

Example: To control the output PGM1 on the Endstation to control a gate via the panel or HomeControl+ App.

In engineer menu navigate to **“PROGRAM OUTPUTS”** & Press

- **“Endstation PGMs?”** Press

**“BELL PGM”** Press twice - until **“PGM Not Used”** is displayed.

Press key until **“User Defined 1”** is shown or input 0170

Press until **“User Outputs?”** & Press

**“User Output No”** [01] & Press

**“User Output Type”**

With key Select latched or pulsed & Press

**“User Output Name”**

In this example Input name eg Gate


Exit Engineer to save changes –

To check configuration – Press **D** and enter the user code

Press until **“OPERATE USER OUTPUTS”** is displayed. Press – **“Select Output”**  
**Gate [01]** will appear.

Press again – **“Output Off”** Gate --- Keep Pressing to toggle Output On / Off

**Now connect to the panel with your Homecontrol + App.** Select the **“Controls”** tab. The toggle switch will have automatically populated the tab with the heading **“Gate”**. Toggle the switch to control the gate.

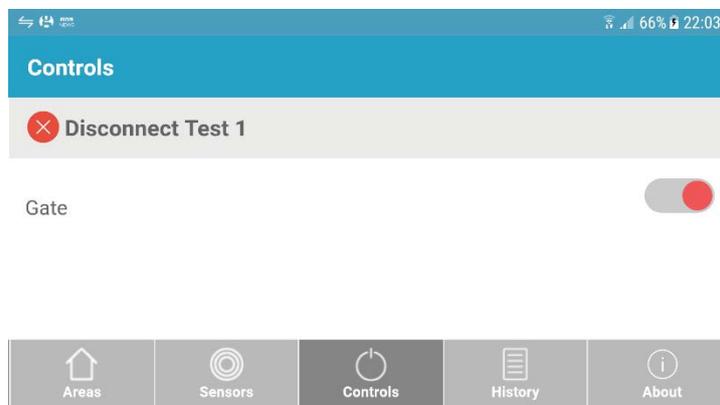

**Follow Installation Guide for Wiring Guidance**