

**!** Please note: Only valid for EURO 46 software revision V10.25h or later

## DualCom Pro

- 1 Make sure that the DualCom Pro has a 12VDC supply.
- 2 Connect the DualCom Pro serial lead to the EURO 46 RS232 connector port and the other end to the following DualCom Pro inputs:
  - Green = RTN
  - Blue = RS232-R
  - Red = RS232-T

Please note: The above connections are in reference to the CSL DualCom Pro Quick Guide.

## EURO 46

- 3 Program the EURO 46 communications for Web Way.
- 4 Enter the 'Account Code'.
- 5 Select the required signalling content types.
- 6 Exit the engineer programming menu.
- 7 Down power the EURO 46, both mains and battery.
- 8 Power up the EURO 46, both mains and battery.
- 9 After powering up the system, wait five minutes for DualCom Pro to establish its connection.
- 10 The EURO 46 and DualCom Pro are now ready to signal.