

# Wired Accessories

The EURO and Enforcer Wired Accessories.  
One family of accessories for both systems.

**ENFORCER**  
two way wireless technology

## EURO Range

The EURO and Enforcer range have a host of accessories that will tailor any property, no matter the size, environment or style.

We have a range of setting/unsetting devices which will also allow entry control that operates lock relays and facilitates door monitoring.

Furthermore the wireless input expander (EURO-ZEM32-WE) gives you the best of both worlds by connecting the wired EURO control panels with the Enforcer two way wireless range.



**Pyronix**  
www.pyronix.com

# The Wired Accessories

## Setting / Unsetting Devices

### Contemporary Keypads



**EURO LCD PZ:**  
LCD keypad with prox, 2 inputs and 1 output.  
**EURO LCD P:**  
LCD keypad with prox.  
**EURO LCD:**  
LCD keypad.

### Flushmount Keypads



**EURO FLUSH B:**  
LCD brass flushmount keypad with prox, 2 inputs and 1 output.  
**EURO FLUSH C:**  
LCD chrome flushmount keypad with prox, 2 inputs and 1 output.  
**EURO FLUSH SC:**  
LCD satin chrome flushmount with prox, 2 inputs and 1 output.

### Internal Tag Readers



**EURO PROXI:**  
Internal tag reader which will set and unset or may be used for door entry control to operate a lock relay. It can also be used as 2 wired inputs.

### External Tag Readers



**EURO PROXE:**  
External tag reader which will set and unset or may be used for door entry control to operate lock relays and perform door monitoring. This reader is IP65 rated.

## Input / Output Expanders

### Wireless Input Expanders



**EURO ZEM32-WE**  
32 input expander that allows the Enforcer wireless range to be learnt onto a EURO control panel.  
It supports 32 wireless inputs, 32 wireless keyfobs and 2 wireless bells.  
*NOTE: This is not compatible with the EURO Mini, EURO Mini Prox or the Enforcer 32-WE.*

### Wired Input Expanders



**EURO ZEM8:**  
8 input expander module in polycarbonate housing.  
**EURO ZEM8+:**  
8 input expander module with 4 outputs in polycarbonate housing.  
**EURO ZEM8+PSU:**  
8 input expander module with 2.5A intelligent PSU.  
All of the above support double pole or DEOL input wiring.

### 2 Input Expander



**EURO ZEM2P:**  
2 input expander module (DEOL wiring only) with speaker in polycarbonate housing.

### Wired Output Expanders



**EURO OEM8R8T:**  
8 way relay and 8 transistor output module in polycarbonate housing.  
**EURO OEM16R+PSU:**  
16 way relay output module with a 2.5A intelligent PSU in a metal housing.

## Miscellaneous

### Expander Cards



**MSX-280**  
Expander card for the EURO 162 panel only. This will expand the panel to 280 inputs.  
**MSX 280 IP**  
It has the same features as the MSX-280 card but allows communication via IP instead of PSTN.

### Modems



**EUR-073-ARM**  
Communicates SMS, Fast Format and SIA 1 or 3 via PSTN. Also allows operation with ARM® software for remote maintenance. Can only be connected to the EURO 162 and 280 panels.  
**DIGI-1200**  
It has the same features as the EURO-073-ARM card, but can only be connected to the EURO 46 and Enforcer 32-WE.  
**DIGI-GSM**  
It has the same features as the DIGI-1200 but communicates using GSM via a SIM card.

### Communicators



**EUR-114**  
14 way communication loom. Connects directly to the EURO 46, 162 and 280 panels (each control panel comes with this loom).  
It also promotes 10 ATE outputs and is ideal for connecting third party communications devices like Redcare and Dualcom.

### Upload/download



**EUR-050**  
CD of the InSite upload/download software (available to download from [www.pyronix.com](http://www.pyronix.com)).  
**EUR-055**  
RS232 lead that connects between the PC and Panel.  
**EUR-USB/SERIAL**  
RS232 to USB converter.

For information on the maximum number of accessories that can be installed on a control panel please refer to RMKT090365 Control Panel Flyer.

